


### **Removal**

---

- 1 Partially drain coolant.
- 2 Remove air filter.
- 3 Remove carburetor (07.2—194).
- 4 Disconnect engine longitudinal regulating shaft and regulating rods.
- 5 Loosen all connections on intake pipe.
- 6 Loosen intake pipe fastening nuts or screws and remove intake pipe.

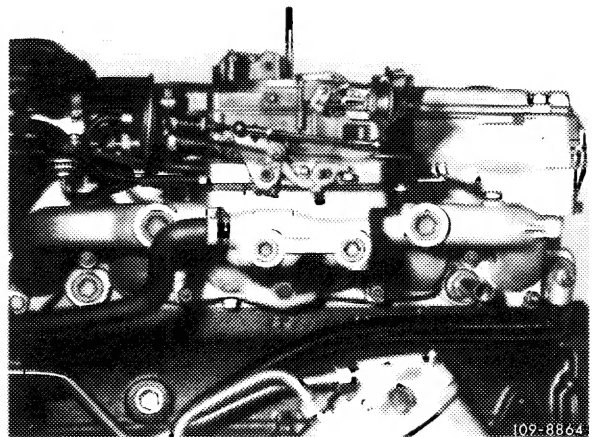

### **Installation**

---

Install intake pipe in vice versa sequence as follows:

- 7 Install new intake pipe flange gasket.
- 8 Add coolant and check cooling system for leaks.
- 9 Adjust idle speed, while checking intake system for leaks (07.2—100).